







These springs need to be replaced periodically

Replacement Springs for Hitachi. Cast Brush Holders

Brush springs wear out over time and need to be replaced. Just because your springforce is in specificatn does not mean they have the proper dynamic response. It is recommended to replace every 5 years

- Kit contains all springs required for 1 turbine
- Prevents eneven brush pressure and prevents selectivity
- Allows for uasy transport to the job site

Kit contains: 12 Phase springs (W6107MCPWR)

2 Ground springs (W6107MCGND)

